

HOW TO CREATING INTEGRATION BETWEEN INSPINIA AND AKUVOX

1.INSIPINIA TOUCH PANEL SETTINGS

- Operation voltage (24VDC)
- Communication with ethernet connection
- You need to make sure that your PC and your intercom is connected to the same network as INSPINIA .After the Inspina Touch panel is opened, 8080 is added to the end of the product IP address(Default IP =192.168.2.100) to access the product Web interface via the web browser. (Figure 1.1)

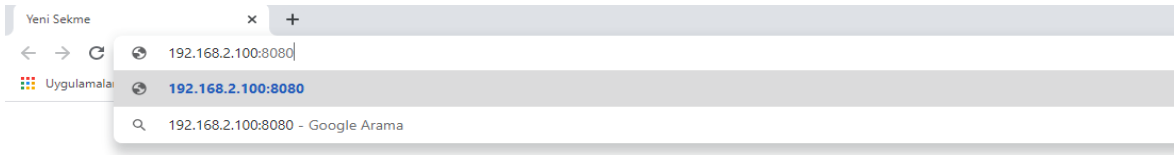


Figure 1.1

- You can access the user interface as shown in the aboce picture.

User interface (Figure 1.2) **Username** = admin / **Password**= admin (New version's password: **4W3FVG**)

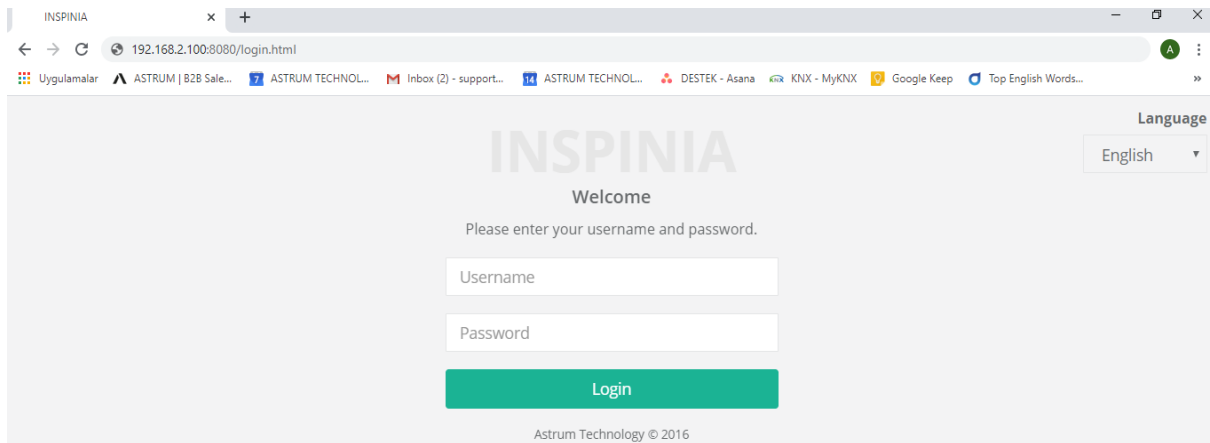


Figure 1.2

- Click the intercom tab in the settings section for configuration.(Figure 1.3)

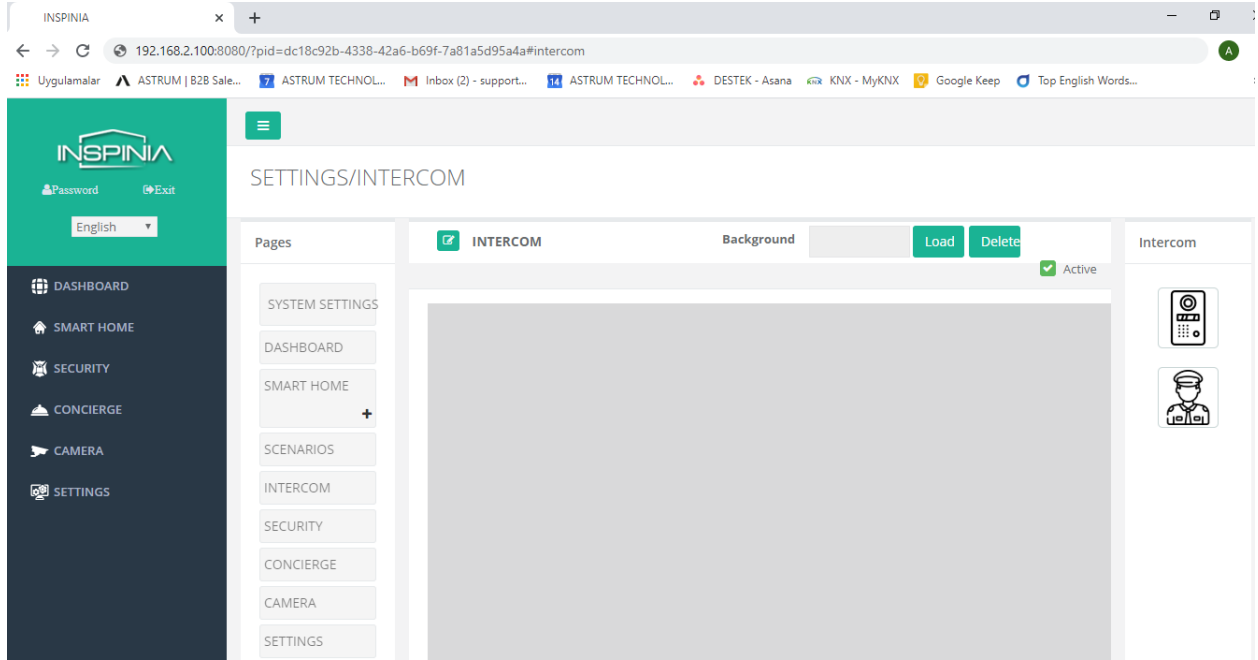


Figure 1.3

- Drag and Drop the image on the right. (Figure 1.4)


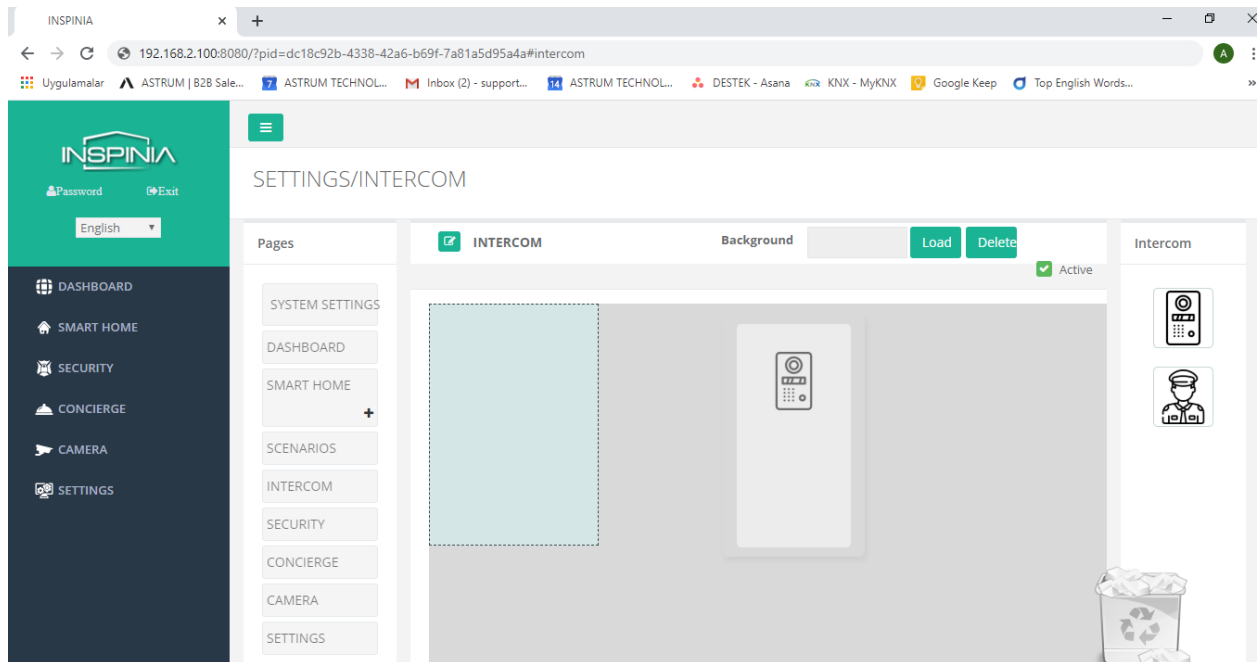


Figure 1.4

- You can make settings after double click the image (Figure 1.5)

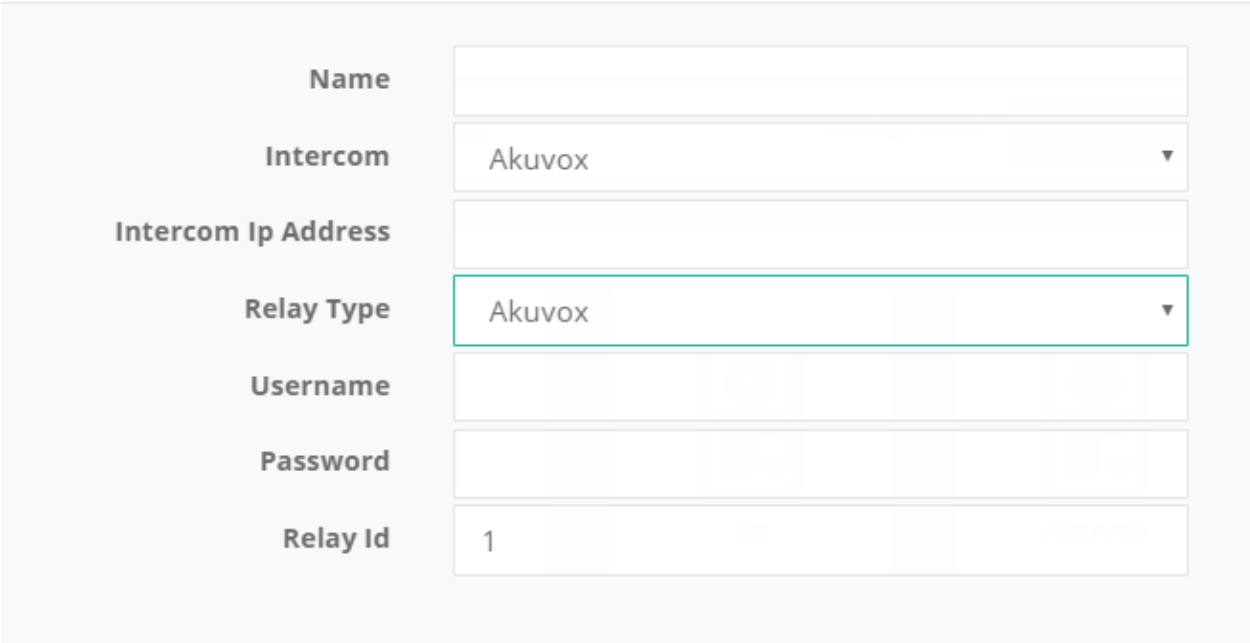

X

Name	
Intercom	Akuvox ▼
Intercom Ip Address	
Relay Type	Akuvox ▼
Username	
Password	
Relay Id	1

Close

APPLY

Figure 1.5

1. **Name** = Text the Device's name (A Blok)
2. **Interkom** = Choose the Intercom type (Akuvox)
3. **Interkom Ip Address** = Text the Intercom Ip Address (Akuvox)
4. **Relay type** = Choose the Relay Type

a) **GPIO** = Touch panel output kontrolü

Output = Choose the Relay output which you want to control with

b) **BUS** = Relay control with Bus Line

Bus adresi= Ip address of the relay module

c) **Ip module** =Control with smart Ip relay

Ip Adresi= Ip address of the smart relay

d) **AKUVOX=** Control of the Internal relay in

Username = Text a name which you prefer

Password= Text a password which you prefer

2. AKUVOX INTERCOM SETTINGS

- You can go to web interface of the Akuvox by write the ip address into web browser.

(Figüre 2.1)



Figüre 2.1

- Web Interface (Figüre 2.2) **Username = admin** **Pasword= admin**

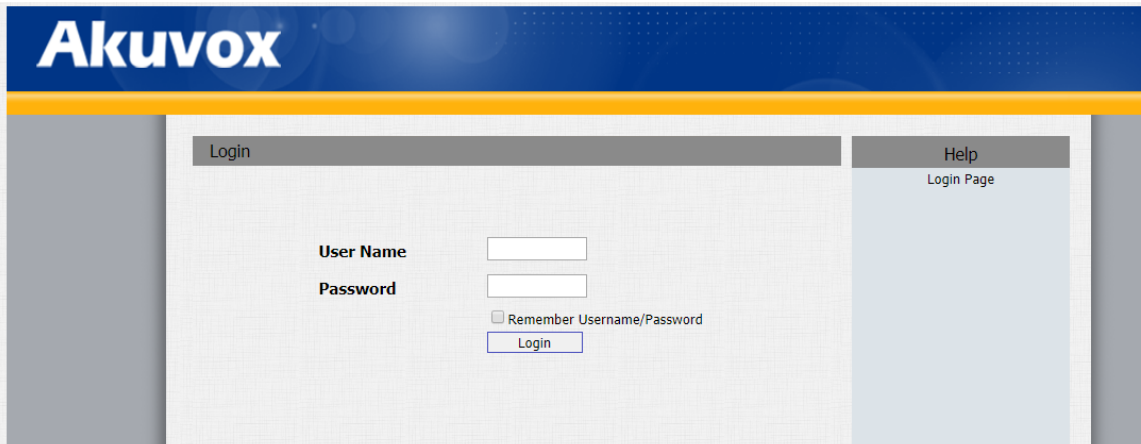


Figure 2.2

- Click to **Intercom – Basic** for make connection between Akvox and Inspinia (Figure 2.3)


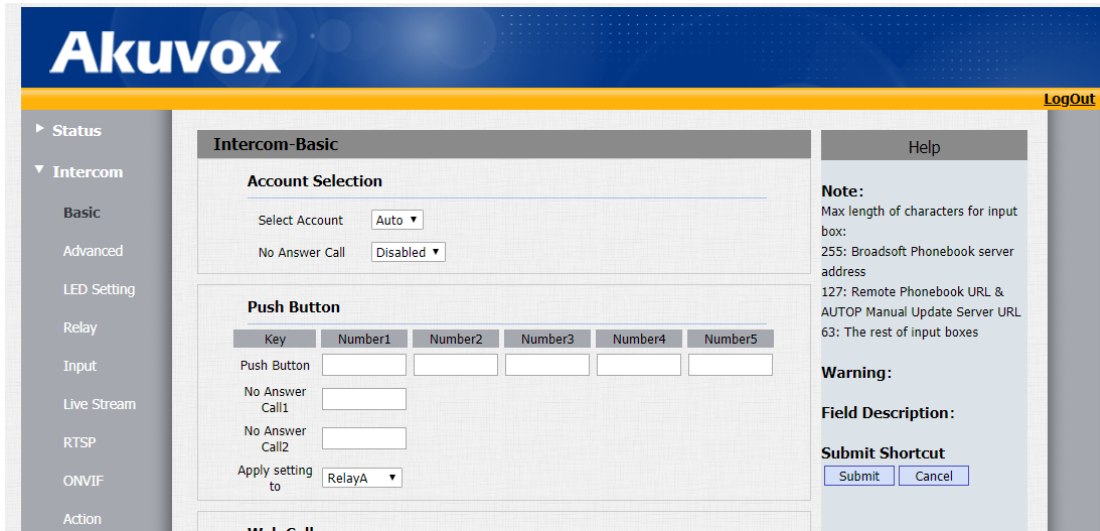


Figure 2.3

1) **Push Button = Touch panel IP**

- For Control the Relay, Open “**Open Relay via HTTP**” section into the Intercom/Relay..
(Figure 2.4)

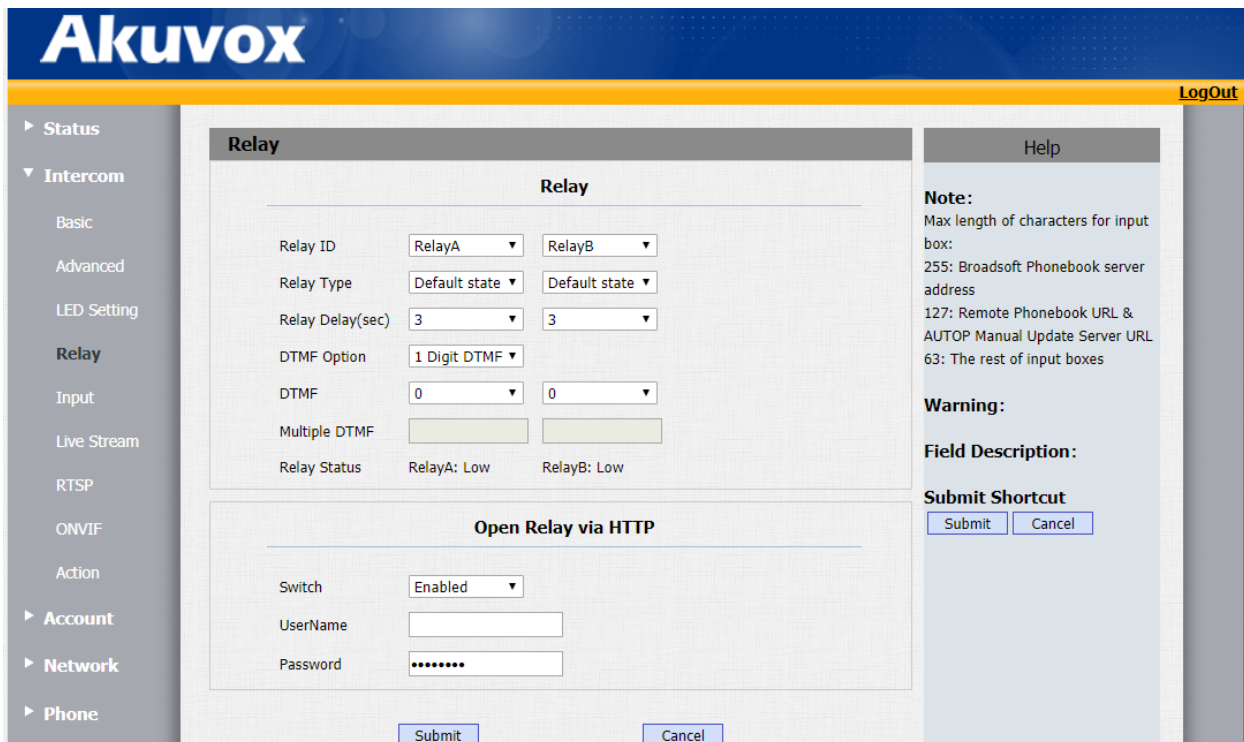

(Figure 2.4)

- 1) **Switch** = Enabled
- 2) **UserName** = Name of the touch panels internal relay (Figure 1.5)

3) **Password** = Password of the Touch panels internal relay (Figure 1.5)