



User Guide for U- Smart APP

Download APP




Scan the QR code to download the U-Smart app. The U-Smart app realizes remote control of thermostat through wireless network.



1. Sign Up & Login


Follow the steps below to log into U-Smart app.






- ① If you already have a U-Smart account, use your account to **login**. If not, tap **Sign Up**.
- ② Set country, region, email, mobile phone number and password, and get the verification code. Tap **Submit**.
- ③ If necessary, tap **Forgot Password** to enter the following interface, and reset your password.

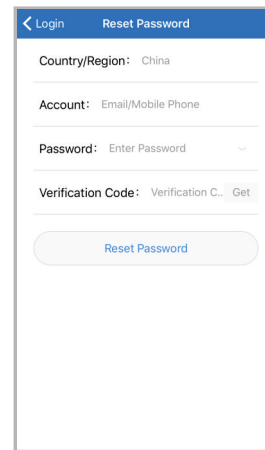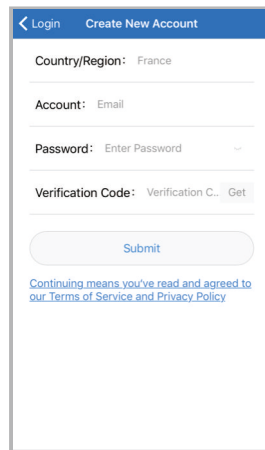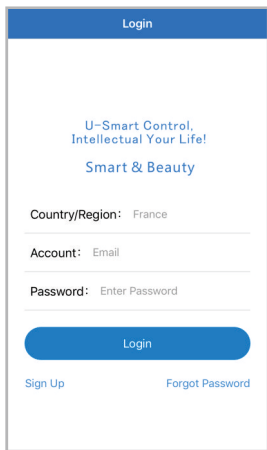


2. Bind Thermostat to APP


Follow the configuration wizard in the app to finish Wi-Fi and App connection. Two configuration modes are provided: normal mode and AP mode.

- ① Make sure that your mobile phone is connected to a 2.4GHz Wi-Fi network. Then tap **+** to add your thermostat device to U-Smart app.
- ② Shut down your thermostat and long press the  key to enter normal Wi-Fi setting mode. Then tap **Next** in the following interface.
- ③ Enter the password of the 2.4GHz Wi-Fi network that your mobile phone is connected to and tap **Next**.
- ④ Wait for a while and your thermostat device will be bound. Then you can set the nickname and icon for this device.
- ⑤ The thermostat will be added to the home interface.

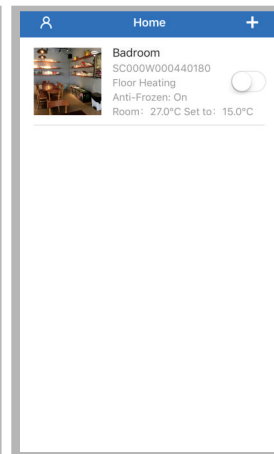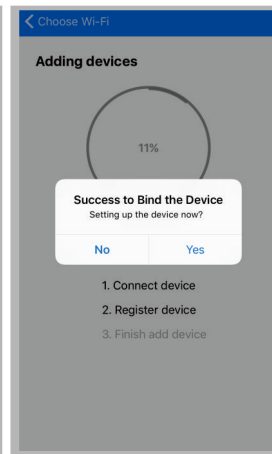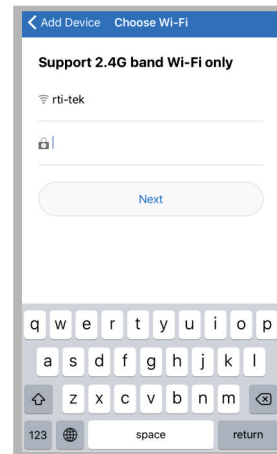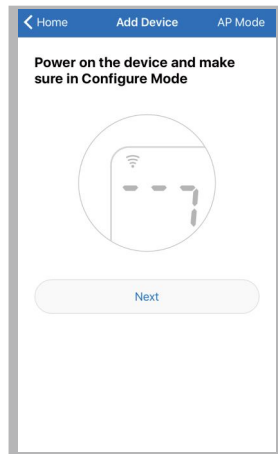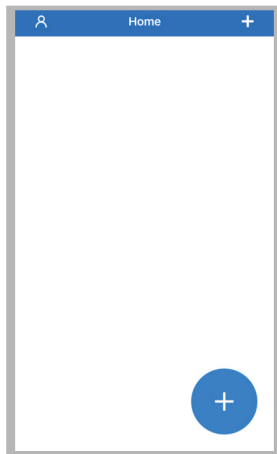


If the normal mode fails, follow the steps below to try again via AP mode.

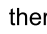
- ① Tap **AP Mode** in the top right corner.
- ② Shut down your thermostat and long press the  key for two times to enter AP Wi-Fi setting mode. Then tap **Next** in the following interface.
- ③ Tap **Go to Wi-Fi Setting** and connect to the Wi-Fi network named **Usmart-XXX**. Then go back to the app.
- ④ Wait for a while and your thermostat device will be bound. Then you can set the nickname and icon for this device.
- ⑤ The thermostat will be added to the home interface.

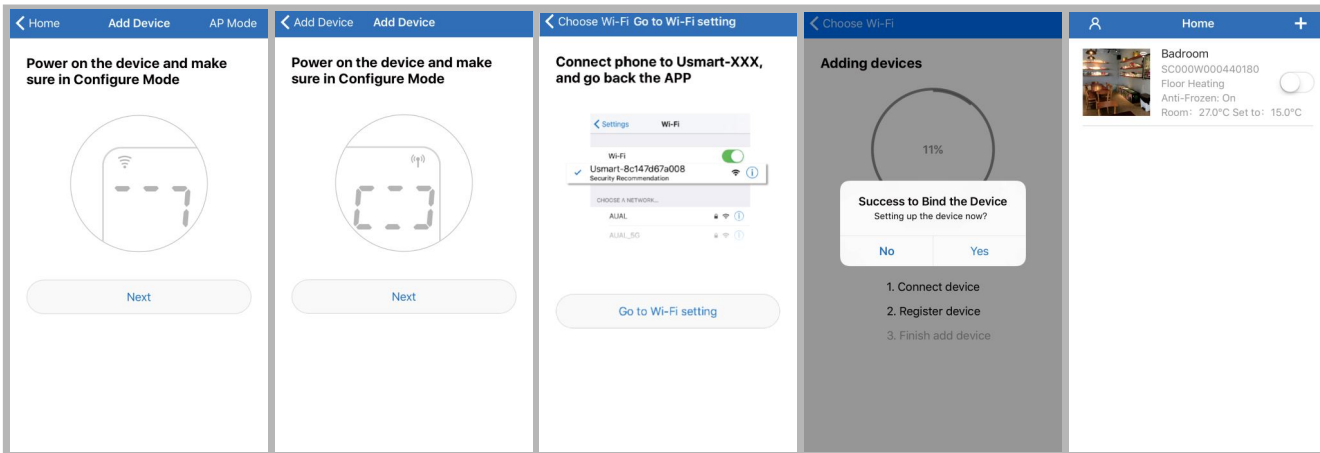

3. Share Thermostat


Share the permission of thermostat to your family or friends by QR code. For example, Phone A shares the permission to Phone B.


- ① Tap  in the top left corner.
- ② On Phone A, tap **Share** and on Phone B, tap **QR Code**.
- ③ On Phone A, select the devices you want to share with, and tap **Share**.
- ④ Use Phone A to scan the QR Code of Phone B.
- ⑤ Wait for a while and the control permission will be shared successfully.

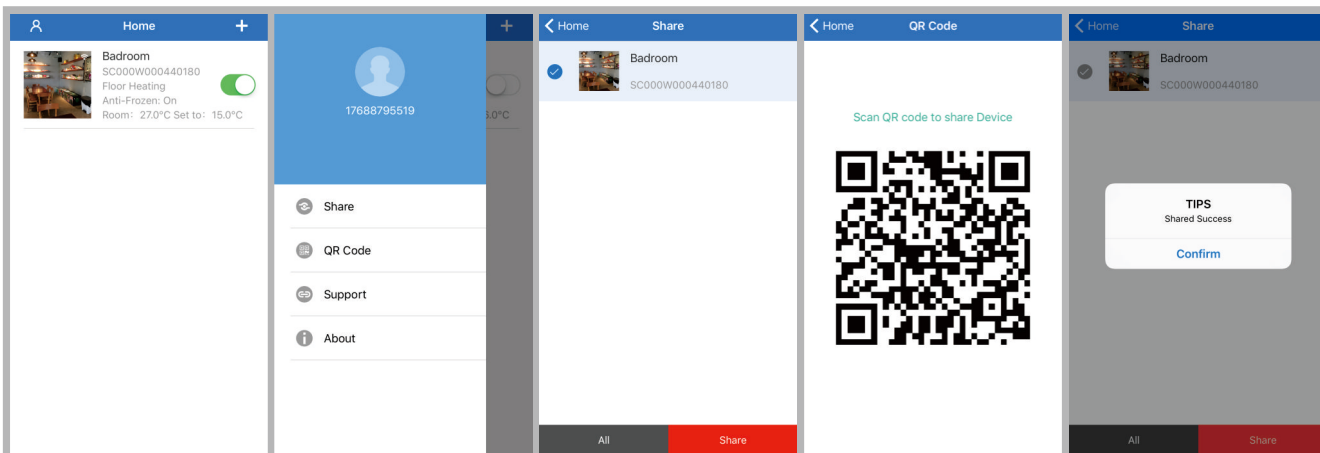

4. Manage Thermostat via U-Smart APP

The following introduces the interfaces of U-Smart app.

- ① Home Interface Tap the switch to turn on or off your thermostat. Tap the icon of the thermostat to enter the configuration interface.
- ② Temperature Setting Interface You can slide the bar to set temperature, select Auto or Manual mode, and tap  to get more advanced settings.
- ③ Device Setting Interface In this interface, you can view device type and device ID, and you can set device tag, device icon and the Anti-Frozen Protection function.
- ④ Automode Setting Interface In this interface, you can configure the weekly programming function.

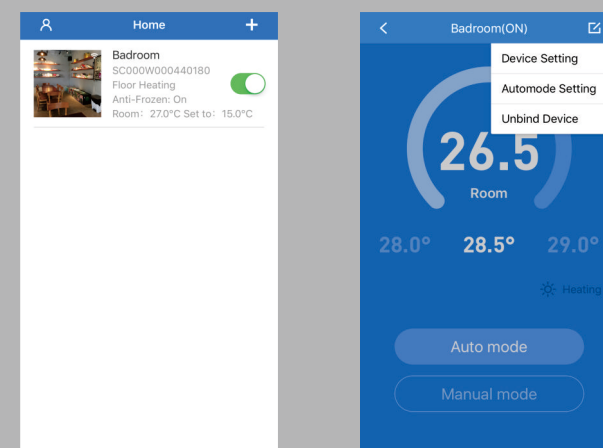

- ③ Device Setting Interface In this interface, you can view device type and device ID, and you can set device tag, device icon and the Anti-Frozen Protection function.
- ④ Automode Setting Interface In this interface, you can configure the weekly programming function.

