# DM838W    Network Music Player with Amplifier



## *Features*

- ➢ 5.0" TFT touch screen;
- ➢ Bluetooth, MP3, SD card and AUX input, network audio source;
- ➢ Support App, Airplay and DLNA;
- ➢ Timer function for music playing and turn on/off;
- ➢ Built-in 2x20W power amplifier, built-in DSP effect;
- ➢ Built-in Hi-Fi digital amplifier, 2.1 outputs support active subwoofer;
- ➢ RJ45( TCP/IP network) interface for connecting to intelligent control and integrated with smart home devices;
- ➢ RJ45 network interface connect to LAN or wireless router; can be controlled by APP;
- ➢ Infrared remote control;
- ➢ Support picture and video displaying;
- ➢ Quad-core processor, 1G running RAM, 8G integrated storage, support SD card up to 32G;
- ➢ Based on android platform, support online software update

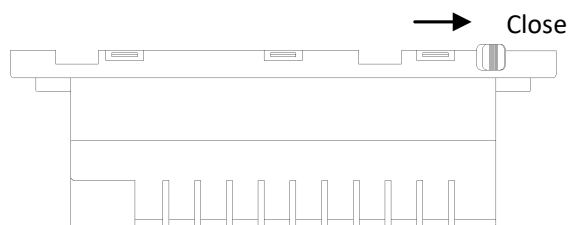## 1. Installation Steps

① **Install cassette and wiring**

Amplifier Output, Antenna

Low Voltage Signal Lines
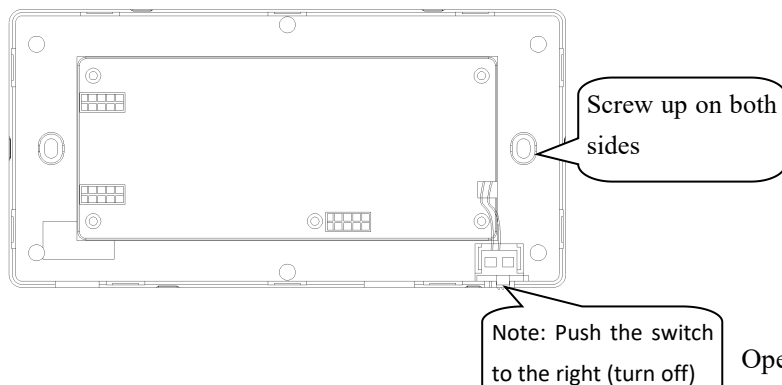
Power Line
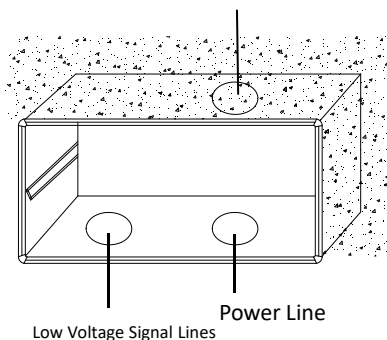
**Cassette in-wall installation**
Cassette size: (L×W×H) 172×86×55mm

② **Turn off power supply (Push the switch to right)**

→ Close

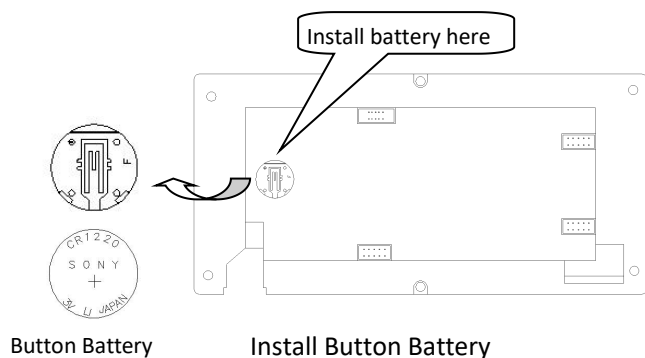③ **Connect to wiring terminal**

④ **Use screws to fix bottom box to Cassette**

Screw up on both sides

Note: Push the switch to the right (turn off)

⑤ **Install the button battery in panel**

Install battery here

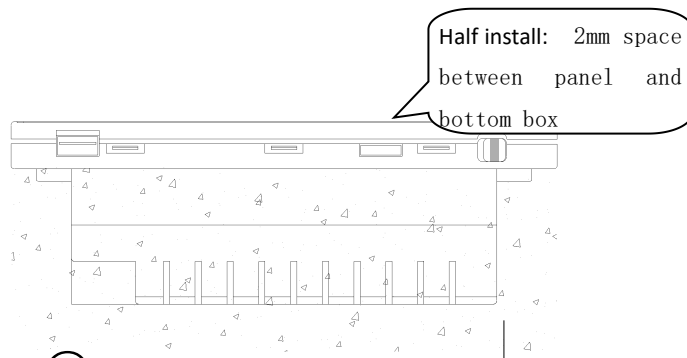Button Battery          Install Button Battery

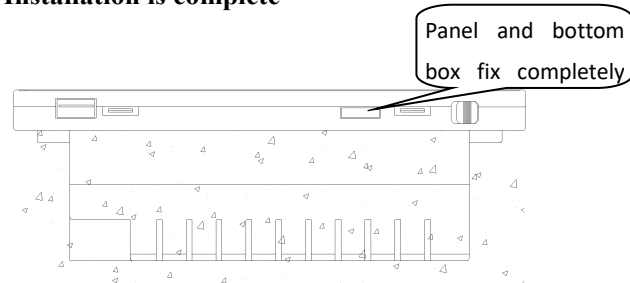⑥ **Half install panel and test**

Half install panel to the bottom box→ Turn on power (Push the switch to left) →Functional test

Half install: 2mm space between panel and bottom box

⑦ **Fastening the panel after test is ok and**

**Installation is complete**

Panel and bottom box fix completely

## 2. Dismounting

① **Turn off the power**

② **Open the fix buttons →**

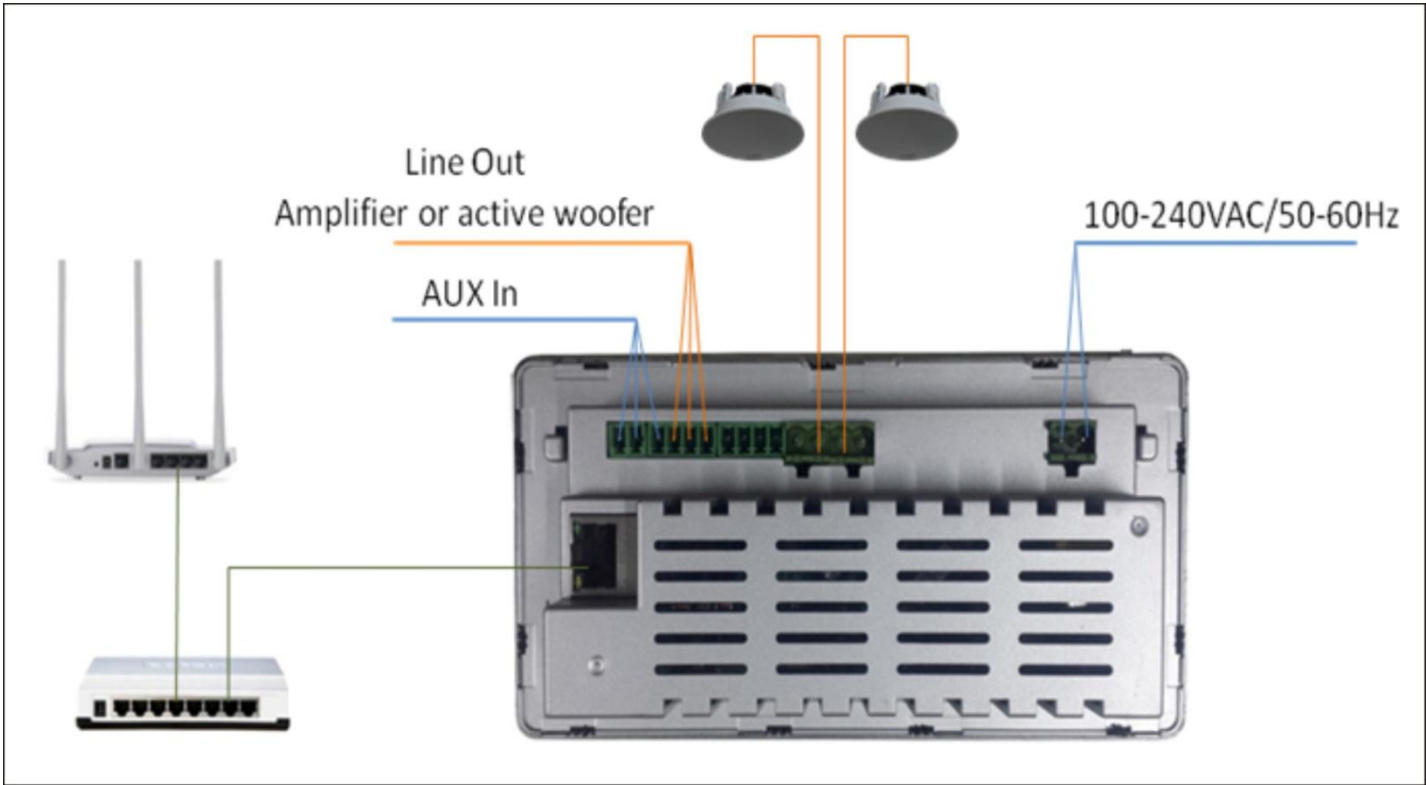**Pull out the panel horizontally**

Button × 6

Button Position

Open the middle button with thumb or other objects (not sharp) slide from upper left corner gap to right, open the rest buttons by slide along the gap. You will hear a sound like 'Click' when each button is opened.

1. Pull out the panel horizontally after open all the buttons.

Thumb slide along the gap in circle

## 3. Wiring Diagram



Line Out
Amplifier or active woofer

AUX In

100-240VAC/50-60Hz

## 4. Connection & Control



DM838

DM838

Switcher

DLNA Hard Disk

Wireless Control

DM838

Wireless Router